

TIMER CHECK LIST

No Display

1. Has the timer been fully charged a min of 2 hours is required prior to use.
2. Press the master “reset” button with a pen tip.

Feeder does not feed

1. Timer override. If a “0” symbol appears on the right hand side of the display above the standard time and daylight saving symbols press the week and hour buttons at the same time and the “0” symbol will disappear disabling the override settings.
2. Check the wire connections at the transformer and the feeder.
3. When plugging in the timer to the mains set the display to “auto” by first pressing the “sec” button repeatedly whilst the display is in clock mode until display shows “off” Now press the “sec” button once more, the display now shows “Auto”.

Feeder turns on but will not turn off

1. Check program “on” and “off” settings, make sure that there are no “00.00.00.” settings Showing on any unused programs, this will make the timer operate at midnight, press the “R” button to remove and leave a blank display.
2. Make sure the “on” and “off” times are not set the same.
3. Check the days displayed for “on” and “off” are the same for both “on” and “off”.
4. To feed every day at the same time both “on” and “off” must display “mon tue wed thu fri sat sun” to change days on display press the “week” button continually.
5. Refer to “Feeder does not feed” no 3 above.

If you are still having problems after trying the above, please contact the Cloverleaf help line on:

Tel: 01277 366002